

Keysight Technologies

Making Fuel Cell AC Impedance Measurements Utilizing N3300A Series Electronic Loads

Application Note



Keysight electronic loads simplify acquisition of measurement data

Making AC impedance measurements on fuel cells can help identify problems with the fuel cell components and help identify deviations in the fuel cell assembly process. When multiple impedance measurements are made at various frequencies, the results can be plotted across the frequency band resulting in an Electrochemical Impedance Spectroscopy (EIS) measurement. Keysight electronic loads have several features that help to simplify this measurement process. This application note discusses a method to make use of the Keysight electronic loads in conjunction with some other readily available equipment to make AC impedance measurements on fuel cells.

Why make AC impedance measurements?

Making AC impedance measurements on fuel cells is important for several reasons. These measurements help identify the kinetic resistances in the fuel cell system, the ohmic resistances in the system (e.g., electrolyte, contact, porous layer resistance), and the transport limitations of the reactant. Fuel cell components affecting the impedance value can include current collectors, porous electrodes, the catalytic layer, and the membrane. The impedance measurements can help identify both problems with the fuel cell components and deviations in the fuel cell assembly process.

Method used for making the fuel cell AC impedance measurements

A method to make an AC impedance measurement on a fuel cell that is producing DC current is to first stimulate the fuel cell with a low level sinusoidal AC current at a particular frequency and then measure both the stimulating AC current and the resultant AC voltage. Measurement instrumentation can be used to acquire the AC voltage and current waveform data. The data can then be read back from the instrumentation to a personal computer, after which any suitable math package can be used to perform a Fast Fourier Transform (FFT) on the data of each waveform. Finally, complex math functions can be used to divide the transformed voltage by the transformed current to obtain the complex impedance (both magnitude and phase). This process can be repeated at any frequency within the capabilities of the equipment being used resulting in a full spectrum of impedance measurements on the fuel cell, or an Electrochemical Impedance Spectroscopy (EIS) measurement.

Equipment required to make AC impedance measurements on the fuel cell

This AC impedance measurement can be made with an appropriately featured electronic load, a function generator, and a personal computer (PC) loaded with the right software. Optional equipment consists of a boost power supply and/or additional loads with fewer features. See Figure 1 for the equipment setup. Note that this setup can also be used for measuring the fuel cell polarization curve or V-I characteristic.

Electronic load and function generator

A specific example of the method mentioned above would be to use a Keysight N3300A series electronic load to provide three of the necessary functions mentioned in the measurement process.

- First, the load can draw DC current from the fuel cell at the desired operating point
- Second, the load can facilitate the AC current stimulation by using an external function generator to drive the external programming input on the load.
- Third, the load itself can be used to measure the fuel cell AC current and voltage since it has the ability to digitize the waveforms. This AC waveform data can then be transferred through GPIB from the load to a personal computer (PC) for analysis.

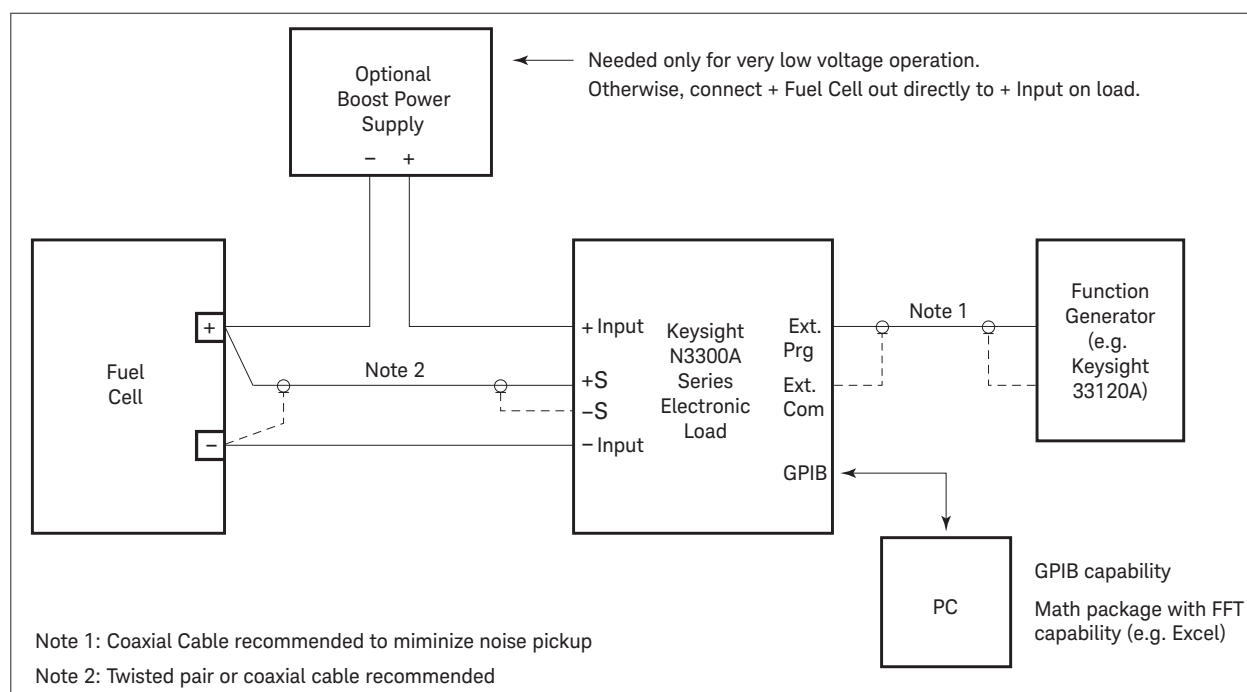


Figure 1. Equipment Set-up

The function generator must have the ability to produce a sine wave and have accurate frequency control in order to ensure accurate FFT results. An excellent choice would be the Keysight 33120A. Keysight N3300A series electronic loads are uniquely qualified to facilitate this measurement process. The primary features that enable these loads to aid in this measurement process are:

- 1. Constant current mode (also has constant voltage and resistance modes)**
Sets the fuel cell DC current operating point at which the AC measurement will be made. This is the programmed DC setting of the electronic load.
- 2. External programming input (also called “analog” programming)**
By using an externally generated sine wave (for example, from a function generator), this feature provides the ability to superimpose a sinusoidal stimulus signal on the programmed DC setting of the electronic load. The bandwidth of the added signal can be from DC to 10 kHz when operating the load input at or above 3 V (the bandwidth is reduced to 1 kHz below 3 V). Scaling is as follows: 0 to 10 V on the external programming input corresponds to 0 to full scale current on the load input. Note that the input impedance of the external programming input is about 511 kΩ. Although the voltage on this input can go negative, note that the total load input current cannot go below 0 A since these loads are unipolar. The external programming input is accessed from a connector on the rear of the load.
- 3. Synchronized input V and I waveform digitization**
Precise synchronization of the acquisition of the V and I waveforms is a necessary condition for the FFT analysis to work properly. Keysight N3300A series electronic loads digitize their input voltage and input current waveforms virtually simultaneously. Acquisition of the data is precisely timed due to the highly accurate crystal used in the digitization process. The sample rate is user controlled and ranges from 10 μs to 0.032 s. It can be incremented by 10 μs increments. The number of data points acquired for the waveforms can be set between 1 and 4096.
- 4. Remote voltage sense**
This feature enables the user to connect the load’s voltage measurement sensing inputs exactly to the points of interest on the fuel cell for accurate voltage measurements. Note that up to a 5 V difference is allowed between the sense terminals and the load input terminals. Also note that there is a pushbutton local/remote sense switch on the back of each load module; for remote voltage sensing, this switch must be in the “out” position or “RMT” position.

5. Low voltage operation

Keysight loads can draw current all the way down to 0 volts on their inputs. The amount of current they can draw is linearly derated from full rated current at 2 V on the input terminals down to 0 A at 0 V on the input terminals. Stacked fuel cells are typically more than 2 V, however, single fuel cells typically operate below 1 V. Therefore, if more current capability than is available at this voltage is required from the load, it is possible to put a power supply in series with the fuel cell in order to boost the total load input voltage¹. Remote voltage sensing can still be done at the fuel cell (see note regarding remote voltage sense above). To meet a higher current demand at lower voltages, it is also possible to use a load that is rated for a higher current since this load will be able to draw more current at lower voltages even without a boost supply. Note that the bandwidth of the load input is 10 kHz at and above 3 V, and 1 kHz below 3 V.

6. Parallel operation

If more current is required from the fuel cell than one load module can handle, Keysight loads can be placed in parallel in order to increase the total current capability. Only one of the paralleled loads would need to be used for the AC impedance measurement as the others would simply be used to draw extra DC current. In fact, a Keysight load could be placed in parallel with another vendor's load to facilitate the AC impedance measurement described here assuming that the parallel load is not impacted by the effect of the AC stimulus.

Personal computer

To communicate with common test equipment, the PC would require GPIB capability (RS-232 could be used, but is much slower). Additionally, the PC would require a math package capable of FFT analysis. Microsoft Excel® with the Fourier Analysis tool loaded (from Analysis ToolPak Add-Ins) can be used for this purpose. Excel can also be used to acquire the measured waveform data directly from the load by utilizing the built-in Visual Basic® programming capability. The electronic load VXI plug&play driver must also be installed in order to communicate with the load via GPIB.

Optional equipment

Other optional equipment would include a boost power supply (needed only when testing fuel cells below 2 V if more current capability than is available at the test voltage is required from the load) and additional loads (to draw more DC current from the fuel cell).

The process for making the AC impedance measurement

First, it will be useful to review the overall measurement method. Refer again to Figure 1 for the equipment setup.

Overall measurement method

1. With the fuel cell connected to the load, set the DC operating point
2. Set the 33120A function generator to the frequency at which an impedance measurement will be made, and for a sine wave output at an appropriate magnitude
3. Digitize the fuel cell voltage and current waveforms with the load
4. Read the digitized waveform data from the load to the PC
5. Perform an FFT on both the voltage and current waveform data
6. Divide the FFT voltage data by the FFT current data to get the complex impedance

1. See *Zero Volt Electronic Load – Application Note*, 5968-6360E

7. In the complex FFT impedance data, look up the resultant measured impedance at the desired frequency
8. Repeat steps 2 through 7 at all frequencies of interest to obtain an EIS plot

Implementation of the majority of these eight steps is straightforward. The only exception is the selection of a setting for the function generator test frequency (step 2) since it is affected by some important factors related to FFT data analysis that need to be considered before making this measurement.

Before discussing these important factors and the selection of the test frequency setting, a few definitions relating to the measurements and FFT analysis are in order. These are as follows:

N = number of samples taken (set with load)

t_s = sample time = time between samples (set with load)

f_s = sample frequency = $1/t_s$ ($= N \cdot f_{bin}$; indirectly set by load t_s)

t_w = sample window = total time during which samples are taken = $N \cdot t_s$
(indirectly set by load N and t_s)

f_{bin} = bin frequency = $1/t_w = 1/(N \cdot t_s) = f_s/N$ (indirectly set by load N and t_s)

f_{tst} = test frequency = frequency at which test is run (set with function generator).

f_{tst} can be any integer multiple of f_{bin} between f_{tstmin} and f_{tstmax}

f_{tstmin} = minimum test frequency = lowest frequency at which test can be run = f_{bin}

f_{tstmax} = maximum test frequency = highest frequency at which test can be run = $f_{bin} \cdot (N/2) = 1/(2 \cdot t_s) = f_s/2$

The important factors to consider related to FFT data analysis are as follows:

Important factors to consider when using this method

- a) The FFT requires N to be an integer power of 2. Therefore, the load must be set to capture waveform data with a number of points (N) that is an integer power of 2, namely 2, 4, 8, 16, 32, 64, 128, 256, 512, 1024, 2048, or 4096 (note that the number of samples that can be taken with the load is from 1 to 4096).
- b) Discrete sample times (t_s) are available from the load resulting in discrete sample frequencies (f_s). As mentioned earlier, the load sample rate can be adjusted between 10 μ s and 0.032 s in 10 μ s increments.
- c) The test frequency, f_{tst} , must be an integer multiple of f_{bin} , the bin frequency. Otherwise, spectral leakage will occur causing inaccuracies in the results of the FFT calculation.
- d) The Excel FFT function acting upon N points in a waveform array returns an array consisting of a DC value followed by N sets of complex numbers representing AC magnitude and phase values. After the DC value, the first $N/2$ AC values in the FFT array are the significant results that are then repeated as a mirror image in the second $N/2$ values.
- e) The DC value returned by the Excel FFT function must be scaled¹ by dividing by N .
- f) The AC values returned by the Excel FFT function must be scaled¹ by dividing by $N/2$ and represent the peak of the sinusoid (divide by $\sqrt{2}$ to get rms values for the magnitudes).

Now, a sample procedure to obtain a valid setting of the test frequency for step 2 of the overall measurement method above can be discussed:

Sample procedure to obtain setting for the test frequency² (for step 2 of the overall measurement method)

1. Note that a package other than Excel in which an FFT operates may scale the FFT returned values differently than Excel
2. See Appendix A for a further discussion regarding the selection of a test frequency

1. Select the desired test frequency ($= f_{des}$). Note that the actual test frequency, f_{tst} , could end up being slightly different than f_{des} due to the discrete sample frequencies available from the load.
2. Select N
3. Multiply f_{des} by N
4. Take the reciprocal of the result to get the desired sample time
5. Round this result to the nearest 10 μs due to the quantized load sample rates
6. Take the reciprocal of the result
7. Divide the result by N to get f_{tst} , the actual test frequency, to be programmed in the function generator (using this procedure, this frequency also happens to be f_{bin} , the bin frequency)

AC impedance measurement example

To demonstrate the overall measurement method of AC impedance measurements with a real example, a known test impedance was inserted in series with the output of a power supply. See Figure 2. The previously described method was used to measure the total series impedance, which was determined nearly entirely by the test impedance since the output impedance of the power supply at the test frequency is much lower than the test impedance itself. The test impedance chosen was 0.49Ω in series with $796 \mu H$, and the desired test frequency was 50 Hz. DC settings for the power supply voltage and load current were arbitrarily chosen to be 5 V and 2 A, respectively.

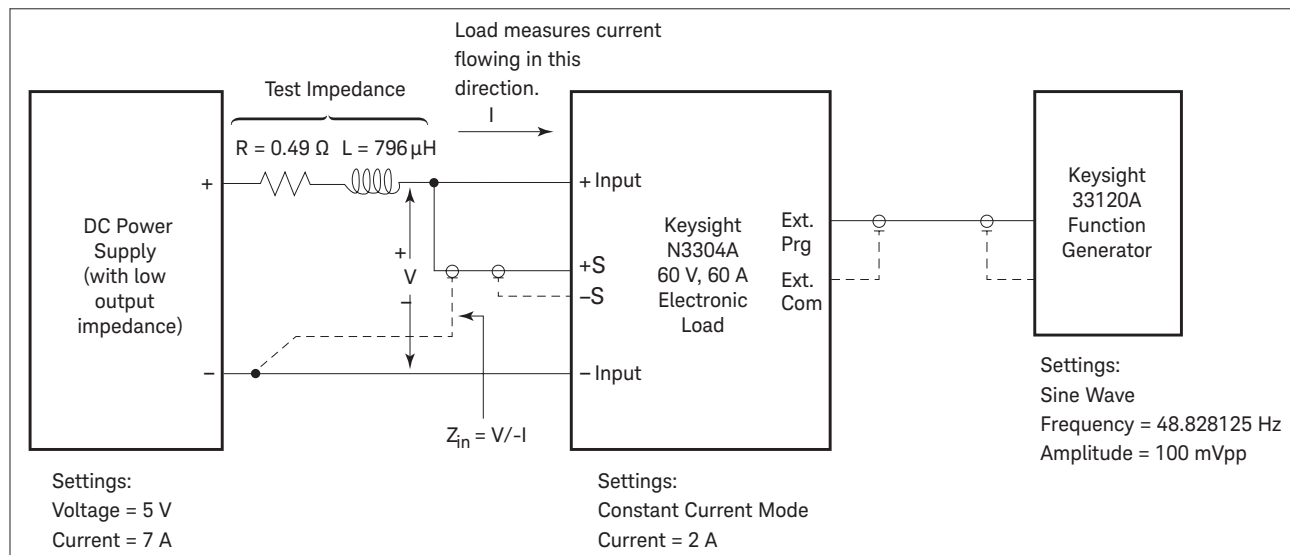


Figure 2. Example Impedance Measurement Test Set-up

Applying the sample procedure steps above in this example to first determine the actual test frequency results in the following:

1. $f_{des} = 50 \text{ Hz}$
2. $N = 256$ (set on load)
3. $f_{des} * N = 50 * 256 = 12800 \text{ Hz}$
4. $1/12800 = 78.125 \mu s$
5. Round 78.125 μs to 80 μs ($= t_s$; set on load)
6. $1/80 \mu s = 12500 \text{ Hz}$ ($= f_s$)
7. $12500/256 = 48.828125 \text{ Hz}$ ($= f_{tst}$ = actual test frequency. Set on function generator. Also equals f_{bin} for this method.)

With the test frequency set on the 33120A, an arbitrary magnitude for the sine wave output was chosen to be 100 mV peak-to-peak. Note that the 33120A function generator and many other function generators are designed with a 50 ohm output impedance and are expecting to drive 50 ohms. Since the external programming input on the load is significantly higher than 50 ohms, the actual output voltage of the 33120A will be twice the programmed value, or 200 mV peak-to-peak.

A Visual Basic program in an Excel spreadsheet was used to control the load and make the waveform measurements utilizing VXI plug&play commands. In the program, a triggered measurement on the load using N and t_s from above was configured and executed resulting in the load digitizing the voltage and current (with AgtN330X_configureTriggered Measurement and AgtN330X_trigger commands). Then, the digitized voltage and current waveform data was read back to the PC (with AgtN330X_fetchArray commands).

Figure 3 shows part of the Excel spreadsheet displaying the measured results from the load for the known test impedance and the subsequent FFT calculations. Columns C and D were populated with the actual voltage and current data points (256 for each) read back from the load. Note that the load measures current flowing into its positive input terminal, which is equal to the current flowing out of the test impedance (or fuel cell). To make the AC impedance measurement, the current flowing into the test impedance (or fuel cell) is the needed current, which is simply equal to the reverse of the load current (refer again to Figure 2). Therefore, column E is equal to -(Current). The measured Voltage and -(Current) from the load are plotted in the graph.

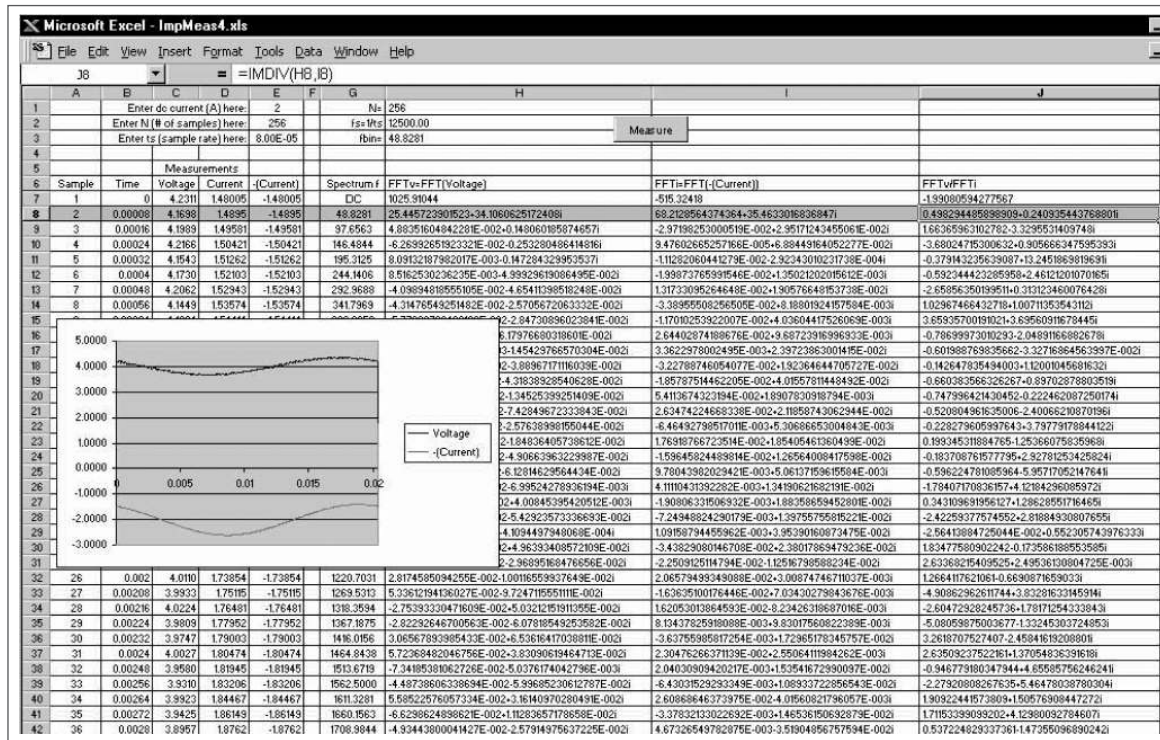


Figure 3. Excel Spreadsheet Showing Load Waveform Measurements and FFT Calculations

Next, the FFT function (from Tools, Data Analysis, Fourier Analysis) was used on the 256 point Voltage and -(Current) data arrays to produce the FFT_v and FFT_i arrays in columns H and I, respectively. Finally, column J shows the complex division of the voltage by the current (IMDIV function) to arrive at the measured complex impedance. Only row 8 is of significance since it shows the measured impedance at the actual test frequency of 48.828125 Hz.

The expected measured AC impedance of 0.49 Ω (R) in series with 796 μH (L) at 48.828125 Hz (f) is 0.49 + j0.2442 (= R + j2πfL). The actual measured AC impedance

result appears as $0.49829 + 0.24094i$ in cell J8 and correlates very well with the expected value.

This process can be automated and repeated at various frequencies to produce multiple AC impedance measurements that can then be plotted along a frequency axis to produce a full spectrum of impedance measurements. When performed on a fuel cell, the final result will be an EIS measurement.

Discussion of scaling

Note that to properly evaluate the magnitudes of the individual FFT_v and FFT_i results in columns H and I, as noted earlier, it is necessary to scale the results by dividing the DC result by N and the AC results by $N/2$. The impedance in column J need not be scaled since when dividing FFT_v by FFT_i , the scaling factors cancel each other. As an example of the scaling, cell H7 shows the FFT transformed DC voltage as 1025.9 that needs to be scaled by dividing by N. $1025.9/256 = 4.01$ V. This is the DC voltage at the load sense terminals, and the value is reasonable since the power supply was set to 5 V, had 2 A of DC current flowing through $0.49\ \Omega$ of resistance, dropping about 1 V from the 5 V. Similarly, the FFT transformed DC current is -515.324 which scales to $-515.324/256 = -2.01$ A, the expected current.

A more interesting calculation can be performed to substantiate the magnitude of the value in cell I8. This is the AC current resulting from the 48.828125 Hz sine wave superimposed on top of the 2 A DC load current via the function generator and load external programming input. With the function generator set at 100 mV peak-to-peak, it supplies double that voltage when terminated in a resistance much higher than $50\ \Omega$, as is the case here. Therefore, the function generator is providing a 100 mV peak sine wave. The Keysight N3304A load used is a 60 A full scale current load, so the 100 mV peak sine wave will produce an expected 600 mA peak sine wave in the current (load scaling on this input was discussed earlier). The FFT_i result at 48.828125 Hz is shown in cell I8 as $68.213 + 35.463i$, which represents a peak magnitude of $76.88 [= \sqrt{(68.213^2 + 35.463^2)}]$ to be scaled by dividing by $N/2$ ($= 256/2 = 128$) resulting in 0.6 A, as expected. The FFT_v result can be similarly justified using the complex FFT_i result times the test impedance.

Summary

Making AC impedance measurements on fuel cells by utilizing Keysight N3300A series electronic loads can eliminate the need for other more costly equipment. Combined with a function generator, and a PC with GPIB capability and an FFT analysis package, the Keysight load provides the key stimulus and measurement functions necessary to make AC impedance measurements. Excel is a convenient package that can provide the necessary automation with GPIB control and Visual Basic programming, in addition to providing the required FFT capability. These software and hardware tools can easily be combined and utilized to make measurements across the frequency band resulting in a cost-effective solution for producing Electrochemical Impedance Spectroscopy measurements for fuel cell testing.

Appendix A

An alternate procedure for obtaining the setting of the test frequency

As part of the AC impedance measurement method described here, it is necessary to select a test frequency, f_{tst} , at which to perform the FFT. In order to avoid inaccuracies in the results of the FFT calculation due to spectral leakage, f_{tst} must be an integer multiple of f_{bin} , the bin frequency. This can be expressed as:

$$f_{tst} = n * f_{bin} \text{ where } n \text{ is an integer.}$$

$$\text{Since } f_{bin} = 1/(N * t_s),$$

$$f_{tst} = n * f_{bin} = n/(N * t_s) \text{ (Equation 1)}$$

The selection of f_{tst} (set on the function generator), N (set on the load), and t_s (also set on the load) must be such that Equation 1 is satisfied.

Since both N and t_s can be selected with parameters on the load, there are many combinations of N and t_s that will yield the same (or similar) f_{tst} . This is illustrated in Table 1 showing the minimum and maximum values for f_{tst} (f_{tstmin} and f_{tstmax}) for a variety of N and t_s selections on the load. Recall that t_s can be set on the load to any value between 10 μs and 0.032 s (32000 μs), but the settings are quantized in 10 μs increments. Also recall that N must be an integer power of 2. Note that f_{tstmin} is dependent on both N and t_s , while f_{tstmax} is dependent only on t_s . Also note that the values displayed in Table 1 are rounded to 4 decimal places for ease of viewing.

As an example showing that there are multiple combinations of N and t_s that will yield the same (or similar) f_{tst} , it is possible to test at $f_{tst} = 39.0625$ Hz with $N = 128$ and $t_s = 200$ μs , or with $N = 256$ and $t_s = 100$ μs , as can be seen in Table 1.

Table shows $f_{tstmin} = f_{bin} = 1/(N * t_s)$ (Hz)										
t_s (μs)	32	64	128	256	512	1024	2048	4096	t_s (μs)	$f_{tstmax} = f_s/2 = 1/(2 * t_s)$ (Hz)
10	3125.0000	1562.5000	781.2500	390.6250	195.3125	97.6563	48.8281	24.4141	10	50000
20	1562.5000	781.2500	390.6250	195.3125	97.6563	48.8281	24.4141	12.2070	20	25000
50	625.0000	312.5000	156.2500	78.1250	39.0625	19.5313	9.7656	4.8828	50	10000
100	312.5000	156.2500	78.1250	39.0625	19.5313	9.7656	4.8828	2.4414	100	5000
200	156.2500	78.1250	39.0625	19.5313	9.7656	4.8828	2.4414	1.2207	200	2500
500	62.5000	31.2500	15.6250	7.8125	3.9063	1.9531	0.9766	0.4883	500	1000
1000	31.2500	15.6250	7.8125	3.9063	1.9531	0.9766	0.4883	0.2441	1000	500
2000	15.6250	7.8125	3.9063	1.9531	0.9766	0.4883	0.2441	0.1221	2000	250
5000	6.2500	3.1250	1.5625	0.7813	0.3906	0.1953	0.0977	0.0488	5000	100
10000	3.1250	1.5625	0.7813	0.3906	0.1953	0.0977	0.0488	0.0244	10000	50
20000	1.5625	0.7813	0.3906	0.1953	0.0977	0.0488	0.0244	0.0122	20000	25
32000	0.9766	0.4883	0.2441	0.1221	0.0610	0.0305	0.0153	0.0076	32000	15.625

Table 1. Minimum and Maximum Test Frequencies for a Selection of t_s and N Values

f_{tst} can be any value between f_{tstmin} and f_{tstmax} that meets the requirements of Equation 1.

To illustrate this point, note that for $N = 1024$ and $t_s = 1000$ μs , the minimum test frequency that can be used is 0.9765625 Hz (f_{tstmin}), which is f_{bin} . The maximum test frequency for this selection of t_s is 500 Hz (f_{tstmax}). From Equation 1, with this selection of N and t_s , other valid f_{tst} values are $2 * 0.9765625$ Hz = 1.953125, or $51 * 0.9765625$ Hz =

49.804687 Hz, or $205 \times 0.9765625 \text{ Hz} = 200.19531 \text{ Hz}$ or any integer multiple of f_{bin} that yields a result no greater than f_{tstmax} for this setting of t_s which is 500 Hz.

For a given value of n , the resultant magnitude and phase information of the FFT is contained in the n^{th} AC value of the FFT data array.

Another way of viewing the application of an FFT to a sinusoidal waveform

Obtain a sinusoidal waveform array by taking N samples every t_s seconds. If the frequency of the waveform meets the requirement $n/(N \cdot t_s)$, where n is a positive integer less than or equal to $N/2$, the magnitude and phase of the waveform can easily be obtained by performing an FFT on the waveform array. (An alternate way of stating the requirement is that a positive integer number of cycles of the waveform must fall within the total sample time of $N \cdot t_s$, as long as not more than $N/2$ cycles fall within the total sample time.)

Since the FFT acting on an array returns an array consisting of a DC value followed by $N/2$ AC values, the magnitude and phase information of the sinusoidal waveform will be contained in the n^{th} AC element of the array.

myKeysight

myKeysight

www.keysight.com/find/mykeysight

A personalized view into the information most relevant to you.

Three-Year Warranty

www.keysight.com/find/ThreeYearWarranty

Keysight's commitment to superior product quality and lower total cost of ownership. The only test and measurement company with three-year warranty standard on all instruments, worldwide.

Keysight Assurance Plans

www.keysight.com/find/AssurancePlans

Up to five years of protection and no budgetary surprises to ensure your instruments are operating to specification so you can rely on accurate measurements.

www.keysight.com/go/quality

Keysight Technologies, Inc.
DEKRA Certified ISO 9001:2008
Quality Management System

Keysight Channel Partners

www.keysight.com/find/channelpartners

Get the best of both worlds: Keysight's measurement expertise and product breadth, combined with channel partner convenience.

For more information on Keysight Technologies' products, applications or services, please contact your local Keysight office. The complete list is available at: www.keysight.com/find/contactus

Americas

Canada	(877) 894 4414
Brazil	55 11 3351 7010
Mexico	001 800 254 2440
United States	(800) 829 4444

Asia Pacific

Australia	1 800 629 485
China	800 810 0189
Hong Kong	800 938 693
India	1 800 112 929
Japan	0120 (421) 345
Korea	080 769 0800
Malaysia	1 800 888 848
Singapore	1 800 375 8100
Taiwan	0800 047 866
Other AP Countries	(65) 6375 8100

Europe & Middle East

Austria	0800 001122
Belgium	0800 58580
Finland	0800 523252
France	0805 980333
Germany	0800 6270999
Ireland	1800 832700
Israel	1 809 343051
Italy	800 599100
Luxembourg	+32 800 58580
Netherlands	0800 0233200
Russia	8800 5009286
Spain	800 000154
Sweden	0200 882255
Switzerland	0800 805353
	Opt. 1 (DE)
	Opt. 2 (FR)
	Opt. 3 (IT)
United Kingdom	0800 0260637

For other unlisted countries:
www.keysight.com/find/contactus
(BP-09-23-14)